

雨帘喷嘴交叉参考指南
亨特VS雨鸟

若更换:	使用雨鸟喷嘴	
	流量	射程
PGP	5000系列	5000系列
1	-	-
2	-	-
3	-	-
4	1.5	1.5
5	2.0	2.0
6	2.5	2.5
7	3.0	3.0
8	4.0	4.0
9	5.0	5.0
10	8.0	6.0
11	-	8.0
12	-	8.0

雨帘喷嘴交叉参考指南
托罗VS雨鸟

若更换:	使用雨鸟喷嘴	
	流量	射程
Super 800	5000系列	5000系列
0.5	-	-
0.75	-	-
1.0	1.5	1.5
2.0	2.5	2.0
2.5	3.0	2.5
3.0	4.0	2.5
4.0	5.0	3.0
6.0	6.0	4.0
8.0	8.0	5.0

若更换:	使用雨鸟喷嘴			
	流量		射程	
I-20	5000系列	5500	5000系列	5500
0.5 SR	-	-	-	18S
1.0 SR	-	-	-	18S
2.0 SR	-	18S	-	18S
0.75 SR	-	-	-	22S
1.5 SR	-	22S	-	22S
3.0 SR	-	26S	-	22S
1.0	1.5	-	1.5	30S
1.5	1.5	2	1.5	30S
2.0	2.0	2	2.0	2
3.0	2.5	3	2.5	2
3.5	3.0	4	3.0	3
4.0	4.0	5	4.0	3
6.0	5.0	6	5.0	4
8.0	6.0	8	6.0	8

若更换:	使用雨鸟喷嘴			
	流量		射程	
TR50	5000系列	5505	5000系列	5505
1.0	-	-	-	-
1.5	1.5	2	1.5	2
2.0	2.0	2	2.0	3
3.0	3.0	3	3.0	3
4.5	4.0	5	4.0	3
6.0	5.0	6	4.0	4
7.5	6.0	8	4.0	4
9.0	8.0	10	5.0	4

若更换:	使用雨鸟喷嘴			
	流量		射程	
I-25	6504	8005	6504	8005
4	4	4	4	4
5	6	6	6	6
7	8	8	6	8
8	10	10	8	8
10	12	12	10	10
13	12	12	12	12
15	14	14	14	12
18	16	16	16	14
20	18	18	18	14
23	-	22	-	16
25	-	24	-	20
28	-	26	-	22
I-40	6504	8005	6504	8005
40	8	8	6	8
41	12	12	10	10
42	12	12	10	12
43	16	16	14	14
44	18	20	18	16
45	-	22	-	20
I-35	6504	8005	6504	8005
9	8	8	8	8
12	12	12	10	10
15	14	14	12	12
18	16	16	14	14
21	18	18	14	14
24	-	22	-	16
27	-	24	-	16
30	-	26	-	20

若更换:	使用雨鸟喷嘴			
	流量		射程	
Toro 2001	6504	8005	6504	8005
9	10	10	10	10
12	12	12	12	12
15	16	16	14	14
18	18	20	18	16
24	-	22	-	20
TR70	6504	8005	6504	8005
7	8	8	-	6
9	8	8	8	8
12	12	12	10	10
16	16	16	14	12
20	-	20	14	14
24	-	20	16	14
27	-	20	18	16
Toro 640	6504	8005	6504	8005
40	8	8	8	10
41	10	12	10	10
42	14	14	12	12
43	16	16	14	14
44	18	20	16	14

Rotors